

# ETHERNET SETUP GUIDE


Your Monarch® 9416® XL® Thermal Transfer printer has a factory-installed internal Ethernet print server. Use this *Setup Guide* to connect the printer to your network with the Print Server Utility (provided on the enclosed CD-ROM).

Information in this document supercedes information in previous versions. Check our Web site ([www.monarch.com](http://www.monarch.com)) for the latest documentation and release information.

## Connecting the Printer

---

1. Turn off the printer.
2. Connect a network cable from the printer to your network using the Ethernet port.

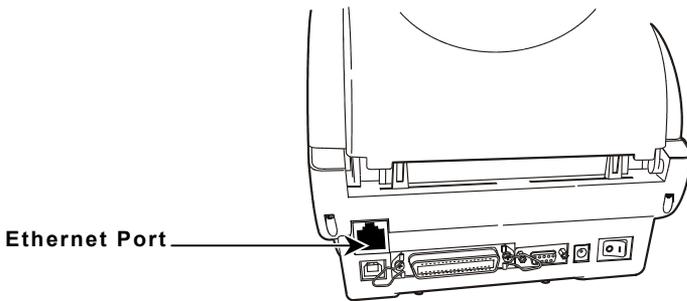


3. Turn on the printer.

**Note:** When using the internal Ethernet printer server, the printer's parallel port is disabled.



# Using the Print Server Utility

1. Run the `M0916Utility.exe` file. You see the main screen.

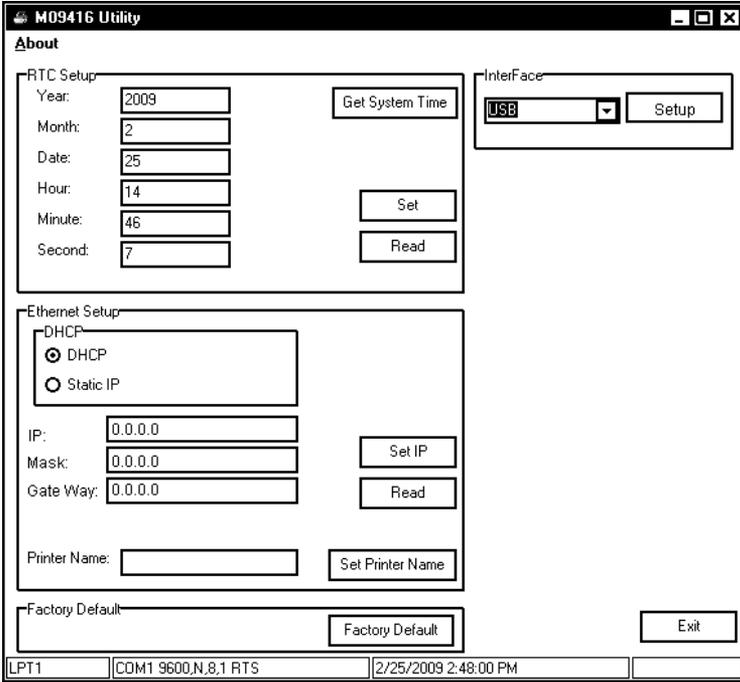


2. Enter any changes to the real time clock or click **Get System Time** to change the time. Then, click **Set**.
3. For DHCP, select DHCP. When using a static IP address, select **Static IP**. Then, enter the IP Address, Subnet Mask, and Gateway. Click **Set IP** when finished.
4. Enter a Printer Name. Then, click **Set Printer Name**.
5. Click **Exit** when finished.

## Resetting the Printer


- ◆ Click **Factory Default** from the main screen to return the printer to factory default settings.
- ◆ Click **Reset Printer** from the web browser screen to reset the printer. This is the same as turning off the printer and then back on. See "Using a Web Browser" for more information.

## Configuring Multiple Printers

1. From the main screen, select **Ethernet** from the InterFace box and click **Setup**. You see the TCP/IP Setup screen.

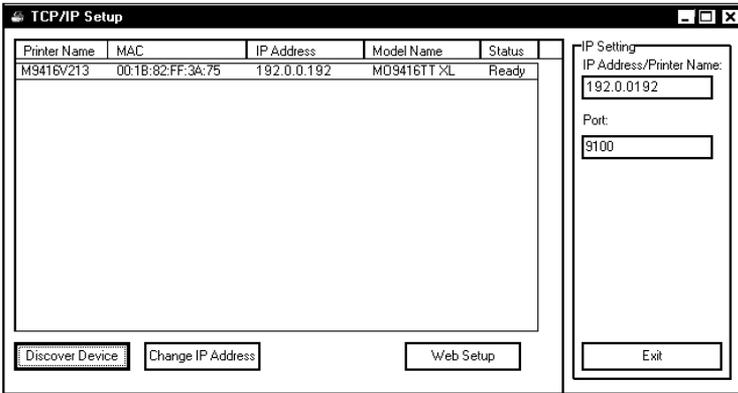

2. Click **Discover Device** to see the printers on your network.
3. Highlight a printer to configure and click **Change IP Address**. You see the Ethernet Setup screen.

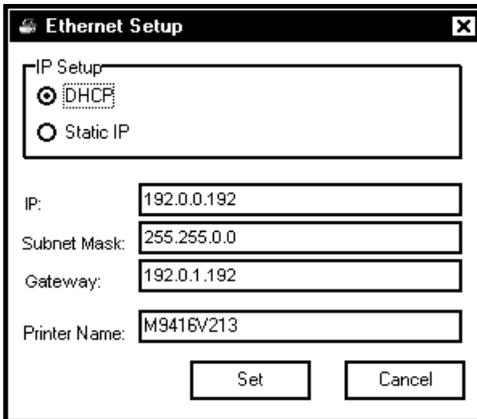

4. For DHCP, select **DHCP**. When using a static IP address, select **Static IP**. Then, enter the IP Address, Subnet Mask, Gateway, and Printer Name.
5. Click **Set**.
6. Click **Exit** when finished.

# Using a Web Browser

You can configure and manage the printer by using your web browser.

1. From the TCP/IP Setup screen, click **Web Setup**. You see the web browser screen.

M9416V213 Print Server - Windows Internet Explorer  
http://192.0.0.192

File Edit View Favorites Tools Help

M9416V213 Print Server

### Printer Information

Version: M09416TT XL Version 2.13B ME  
Checksum: 0618E9A  
Milage: 0.545 Km  
Status: Ready

### Printer Function

### Network Setup

Printer Name: M9416V213

IP Address:  
 DHCP  
 Static IP  
-- IP Address: 192.0.0.192  
-- Subnet Mask: 255.255.0.0  
-- Default Gateway: 192.0.1.192

Primary DNS Server: 192.1.10.192  
Secondary DNS Server: 192.2.1.192

### SMTP Setup

SMTP Server:

SMTP Authentication:  
 No  
 Yes  
-- User Name:   
-- Password:

Sender E-mail Address:   
Receiver E-mail Address:

E-mail Notification:  Yes  No

Done

2. Enter any necessary network and SNMP settings.
3. Click Set to save the settings.
4. Click Refresh to refresh the browser's window.
5. Close your browser.
6. Click **Exit** when finished.