


# 9419 WIFIMODULE INSTALLATION GUIDE

Use these instructions to install the WiFi module on the Avery Dennison® Monarch® 9419 Printer. Use the Printer Management Utility to configure the WiFi settings. For information, refer to the *Offline/Online System Administrator's Guide*.


You need a small Phillips screwdriver to install the WiFi module.

**Caution:** Electrostatic discharge can damage or destroy the printhead or electronic components.

1. Turn the cover latches and lift the cover.
2. Remove the WiFi module cover.

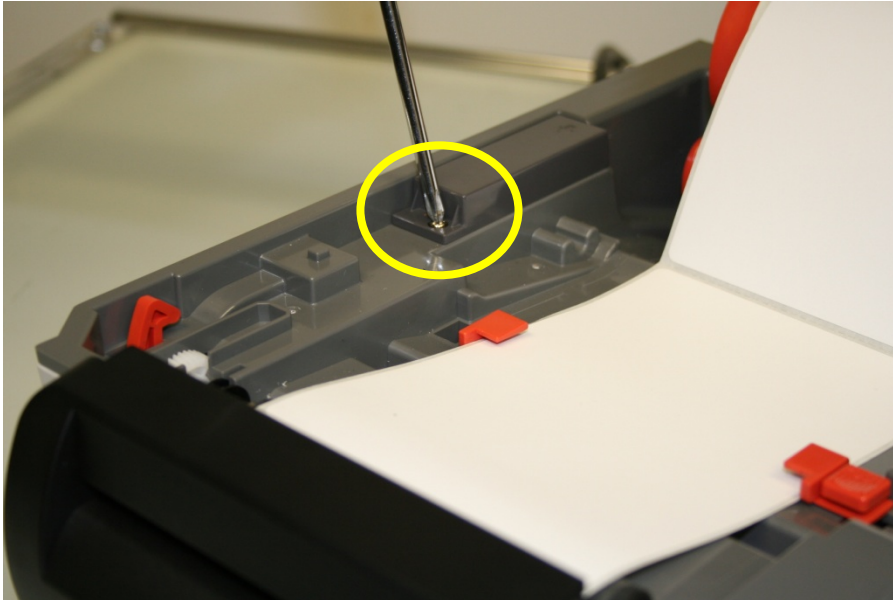

3. Insert the WiFi module in the slot.

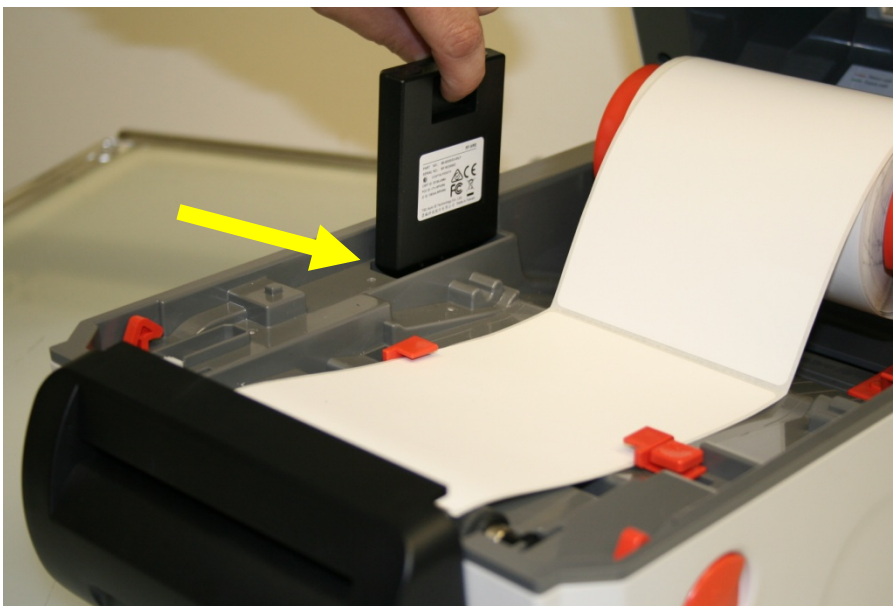

**Note:** The wireless module has a flat corner to match the opening in the printer; the module must be inserted as shown.

4. Press the WiFi module until it snaps into place.



5. Replace the WiFi module cover.

