UPDATING 9419 PRINTER FIRMWARE

Transferring Firmware via the Printer Management Utility

Download the latest firmware file from our Website. To transfer the firmware file to the printer: Connect the printer to your computer and turn on the printer.

1. Double click on the Printer Management Utility icon to open it.

File	e Manager File Download	
Printer Configuration File Manager Command Tool RTC Setup Printer Fund	File Type	•
Select the printer.	[Browse
Click File Manager.	File Name	
Select the Firmware File Type to download.	File Size	Bytes
Click Browse to navigate to the file.	Memory Device	FLASH 👻
Click Open .	Http download file:	2
•		
Click Download to send the file to the printer.	Down	băd
lick Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device O DRAM O FLA	0.0.192) -
lick Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device O DRAM	ASH O CARD Physical Space
lick Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device O DRAM FLA 203 dpi 1_0.bas	ASH CARD Physical Space 131072 KB Free Space
lick Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device O DRAM FLA 203 dpi 1_0.bas	ASH CARD Physical Space 131072 KB Free Space 80744 KB
lick Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device O DRAM FLA 203 dpi 1_0.bas	ASH CARD Physical Space 131072 KB Free Space 80744 KB Remove
Click Download to send the file to the printer.	File Information Printer Warehouse 1 (192.0 Memory Device DRAM FLA 203 dpi 1_0.bas	ASH CARD Physical Space 131072 KB Free Space 80744 KB Remove Get

Transferring Firmware via USB Flash Drive

Download the latest firmware file from our Website. To transfer the firmware file to the printer:

- 1. Save firmware to root directory of a USB flash drive (make sure it is the right firmware for the print head in your printer (203/300)).
- 2. Change file name to auto.new.
- 3. Plug USB flash drive into the printer and turn it on.
- 4. The printer shows 'Updating Bios'.
- 5. After the printer reboots, remove the USB flash drive from the printer.